

Measurement and control system KJM MANDÍK
Climatix

Modbus table

for AHU version software 61.01 and higher

11/2025

MANDÍK®



ATEX II 2G IIB T4

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
Operating mode	Selection	1	R/W	0- Schedule 1- Off 2- Tempering 3- Reduced 4- Comfort
	Current	2	R	0- Off 1- StandbyTempering 2- Reduced 3- Comfort 4- Freecooling 5- FrostProtect
	Auxiliary	3	R	0- Null 4- FanSpeed Compensation 5- Ventilation 6- ProtectWater Heating 10- Boiler 11- Start 12- BlockFan 13- SuperiorBlock 14- Testing
	Status	865	R	0- Off 1- Air 2- Heat 3- Cool 4- Off 5- Tsup
	Enabling modes	890	R/W	0- All 1- AutoWater 2- Heat+ 3- Cool+ 5- Heat 5- Cool 6- Season 7- Ventilate
	AutoWater mode - cooling limit	891	R/W	Value * 10 (°C)
	AutoWater mode - heating limit	892	R/W	Value * 10 (°C)
	AutoWater mode - Heat/Cool switchover delay	893	R/W	Value (min)
	AutoWater mode - current status	894	R	0- Off 1- Cooling 2- Heating
Desired temperature	In current mode	4	R/W	Value * 10 (°C)
	Setting for Comfort mode in summer	5	R/W	Value * 10 (°C)
	Setting for Comfort mode in winter	863	R/W	Value * 10 (°C)
	Setting for Reduced mode in summer	6	R/W	Value * 10 (°C)
	Setting for Reduced mode in winter	864	R/W	Value * 10 (°C)
	Setting for Protection mode	7	R/W	Value * 10 (°C)

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	Summer compensation	888	R/W	Value * 10 (°C)
	Preheat	889	R/W	Value * 10 (°C)
Alarming	Count active alarm	8	R	Value
	Alarm acknowledge	9	R/W	0-Off / 1-Acknowledge
	Alarm LED	10	R	0- Off 1- Blinking 2- On
Measured temperatures	Behind the recuperator on the exhaust air	11	R	Value * 10 (°C)
	Behind the recuperator on the exhaust air - alarm	12	R	0- OK / 1- Error
	Supply air	13	R	Value * 10 (°C)
	Supply air - alarm	14	R	0- OK / 1- Error
	Preheat air	15	R	Value * 10 (°C)
	Prehaet air - alarm	16	R	0- OK / 1- Error
	Flue gas	17	R	Value * 10 (°C)
	Flue gas - alarm	18	R	0- OK / 1- Error
	Extract air	19	R	Value * 10 (°C)
	Extract air - alarm	20	R	0- OK / 1- Error
	Exhaust air	21	R	Value * 10 (°C)
	Exhaust air - alarm	22	R	0- OK / 1- Error
	Outdoor	23	R	Value * 10 (°C)
	Outdoor - alarm	24	R	0- OK / 1- Error
	Heating water supplied to the exchanger	25	R	Value * 10 (°C)
	Heating water supplied to the exchanger - alarm	26	R	0- OK / 1- Error
	Heating water returning from the exchanger	27	R	Value * 10 (°C)
	Heating water returning from the exchanger - alarm	28	R	0- OK / 1- Error
	Cooling water supplied to the exchanger	29	R	Value * 10 (°C)
	Cooling water supplied to the exchanger - alarm	30	R	0- OK / 1- Error
	Cooling water returning from the exchanger	31	R	Value * 10 (°C)
	Cooling water returning from the exchanger - alarm	32	R	0- OK / 1- Error
	Room 3	33	R	Value * 10 (°C)
	Room 3 - alarm	34	R	0- OK / 1- Error
	Room	35	R	Value * 10 (°C)
	Room - alarm	36	R	0- OK / 1- Error
	Room 2	37	R	Value * 10 (°C)
	Room 2 - alarm	38	R	0- OK / 1- Error
	Heating water 2 supplied to the exchanger	39	R	Value * 10 (°C)
	Heating water 2 supplied to the exchanger - alarm	40	R	0- OK / 1- Error
	Heating water 2 returning from the exchanger	41	R	Value * 10 (°C)
	Heating water 2 returning from the exchanger - alarm	42	R	0- OK / 1- Error
	Cooling water 2 supplied to the exchanger	43	R	Value * 10 (°C)
	Cooling water 2 supplied to the exchanger - alarm	44	R	0- OK / 1- Error
	Cooling water 2 returning from the exchanger	45	R	Value * 10 (°C)
	Cooling water 2 returning from the exchanger - alarm	46	R	0- OK / 1- Error
	Inlet	47	R	Value * 10 (°C)
	Innlet - alarm	48	R	0- OK / 1- Error
	Behind recuperator on supply air	49	R	Value * 10 (°C)
	Behind recuperator on supply air - alarm	50	R	0- OK / 1- Error
	Room unit	860	R	Value * 10 (°C)

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	Room unit - alarm	861	R	0- OK / 1- Error
	Internal controller	862	R	Value * 10 (°C)
	Reheat	866	R	Value * 10 (°C)
	Rehaet - alarm	867	R	0- OK / 1- Error
	Room 4	868	R	Value * 10 (°C)
	Room 4 - alarm	869	R	0- OK / 1- Error
	Room sensor selection	870	R/W	0- Average 1- Max 2- Min 3- 1st sensor 4- 2nd sensor 5- 3rd sensor 6- 4th sensor
	Antifreeze thermostat	871	R	Value * 10 (°C)
	Antifreeze thermostat - alarm	872	R	0- OK / 1- Error
	Antifreeze thermostat 2	873	R	Value * 10 (°C)
	Antifreeze thermostat 2 - alarm	874	R	0- OK / 1- Error
	Supply air circuit 2	875	R	Value * 10 (°C)
	Supply air circuit 2 - alarm	876	R	0- OK / 1- Error
Filter supply air	State - alarm	51	R	0- OK / 1- Error
	Pressure	52	R	Value (Pa)
	Select type alarming for digital manostat	53	R/W	0- Info (dirty) 1- Hard (clogged)
	Setting of the filter clogging limit pressure for information message	54	R/W	Value (Pa)
	Setting the filter clogging limit pressure to shut down the unit	55	R/W	Value (Pa)
	State	56	R	0- Null 1- OK 2- Dirty (Info) 3- Clogged (Hard) 4- ErrorSensor
	Pressure sensor - alarm	57	R	0- OK / 1- Error
	Operating hours with a dirty filter	58	R	Value
Filter supply air 2	State - alarm	66	R	0- OK / 1- Error
	Pressure	59	R	Value (Pa)
	Select type alarming for digital manostat	60	R/W	0- Info (dirty) 1- Hard (clogged)
	Setting of the filter clogging limit pressure for information message	61	R/W	Value (Pa)
	Setting the filter clogging limit pressure to shut down the unit	62	R/W	Value (Pa)
	State	63	R	Same as filter supply air 1
	Pressure sensor - alarm	64	R	0- OK / 1- Error
	Operating hours with a dirty filter	65	R	Value
Filter extract air	State - alarm	76	R	0- OK / 1- Error
	Pressure	69	R	Value (Pa)

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	Select type alarming for digital manostat	70	R/W	0- Info (dirty) 1- Hard (clogged)
	Setting of the filter clogging limit pressure for information message	71	R/W	Value (Pa)
	Setting the filter clogging limit pressure to shut down the unit	72	R/W	Value (Pa)
	State	73	R	Same as filter supply air 1
	Pressure sensor - alarm	74	R	0- OK / 1- Error
	Operating hours with a dirty filter	75	R	Value
Filter extract air 2	State - alarm	84	R	0- OK / 1- Error
	Pressure	77	R	Value (Pa)
	Select type alarming for digital manostat	78	R/W	0- Info (dirty) 1- Hard (clogged)
	Setting of the filter clogging limit pressure for information message	79	R/W	Value (Pa)
	Setting the filter clogging limit pressure to shut down the unit	80	R/W	Value (Pa)
	State	81	R	Same as filter supply air 1
	Pressure sensor - alarm	82	R	0- OK / 1- Error
	Operating hours with a dirty filter	83	R	Value
Filter grease	State - alarm	85	R	0- OK / 1- Error
	Pressure	86	R	Value (Pa)
	Select type alarming for digital manostat	87	R/W	0- Info (dirty) 1- Hard (clogged)
	Setting of the filter clogging limit pressure for information message	88	R/W	Value (Pa)
	Setting the filter clogging limit pressure to shut down the unit	89	R/W	Value (Pa)
	State	90	R	Same as filter supply air 1
	Pressure sensor - alarm	91	R	0- OK / 1- Error
	Operating hours with a dirty filter	92	R	Value
Filter grease 2	State - alarm	93	R	0- OK / 1- Error
	Pressure	94	R	Value (Pa)
	Select type alarming for digital manostat	95	R/W	0- Info (dirty) 1- Hard (clogged)
	Setting of the filter clogging limit pressure for information message	96	R/W	Value (Pa)
	Setting the filter clogging limit pressure to shut down the unit	97	R/W	Value (Pa)
	State	98	R	Same as filter supply air 1
	Pressure sensor - alarm	99	R	0- OK / 1- Error
	Operating hours with a dirty filter	100	R	Value
Air quality	Setpoint by mode	106	R	Value (ppm)
	Setting for Comfort mode	107	R/W	Value (ppm)

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	Setting for Reduced mode	108	R/W	Value (ppm)
	State - alarm	109	R	0- OK / 1- Bad
	Current	110	R	Value (ppm)
	Number of hours of operation with poor air quality	111	R	Value
	Number of starts airing with poor air quality	112	R	Value
	Setpoint start airing - high limit	113	R/W	Value (ppm)
	Setpoint stop airing - low limit	114	R/W	Value (ppm)
	Choice of method airing in poor air quality	115	R/W	0- No 1- Fans 2- Dampers 3- Both
	Setting the supply fan speed for the airing state	116	R/W	Value (%)
	Setting the exhaust fan speed for the airing state	117	R/W	Value (%)
	Setting the amount of fresh air for the airing state	118	R/W	Value (%)
	Choice of unit status to respond to poor air quality	119	R/W	0- UnitOn 1- Always 2- Tempering
	Sensor selection	120	R/W	0- Avg 1- Max 2- Min 3- Sensor 1 4- Sensor 2 5- Sensor 3 6- Sensor 4
	Sensor	121	R	Value (ppm)
	Sensor - alarm	122	R	0- OK / 1- Error
	Sensor 2	123	R	Value (ppm)
	Sensor 2 - alarm	124	R	0- OK / 1- Error
	Sensor 3	125	R	Value (ppm)
	Sensor 3 - alarm	126	R	0- OK / 1- Error
	Sensor 4	127	R	Value (ppm)
	Sensor 4 - alarm	128	R	0- OK / 1- Error
Air flow regulators	Regulator 1	129	R	Value (%)
	Regulator 2	130	R	Value (%)
	Regulator 3	131	R	Value (%)
	Regulator 4	132	R	Value (%)
Humidity	Setpoint by mode	141	R	Value (%)
	State	142	R	0- Off 1- OK 2- Low 3- High 4- Outdoor
	Current	143	R	Value (%)
	Setpoint for Comfort mode	144	R/W	Value (%)
	Setpoint for Reduced mode	145	R/W	Value (%)
	Set the upper setpoint hysteresis - start	146	R/W	Value (%)
	Set the lower hysteresis of the setpoint	147	R/W	Value (%)
	Selecting the state units to respond to the humidity outside	148	R/W	0- UnitOn

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	the required values			1- Always 2- Tempering
	Room sensor selection	149	R/W	0- Avg 1- Max 2- Min 3- Sensor 1 4- Sensor 2 5- Sensor 3 6- Sensor 4
	Selection of components used for active dehumidification	150	R/W	0- No 1- Condens unit 2- Heat pump 3- Water cooler 4- All
	Selection of components used for passive dehumidification	151	R/W	0- No 1- Fans 2- Dampers 3- Both
	Setting the supply fan speed for passive dehumidification	152	R/W	Value (%), negative value blocks fan usage
	Setting the exhaust fan speed for passive dehumidification	153	R/W	Value (%), negative value blocks fan usage
	Setting the amount of fresh air in passive dehumidification	154	R/W	Value (%), negative value blocks the use of fresh air
	Outdoor sensor	155	R	Value (%)
	Absolute value of the outside air	156	R	Value (g/kg)
	Outdoor sensor - alarm	157	R	0- OK / 1- Error
	Supply air sensor	158	R	Value (%)
	Absolute value of the supply air	159	R	Value (g/kg)
	Supply air sensor - alarm	160	R	0- OK / 1- Error
	Room sensor	161	R	Value (%)
	Absolute value in the room	162	R	Value (g/kg)
	Room sensor - alarm	163	R	0- OK / 1- Error
	Extract air sensor	164	R	Value (%)
	Absolute value of the extract air	165	R	Value (g/kg)
	Extract air sensor - alarm	166	R	0- OK / 1- Error
	Room sensor 2	167	R	Value (%)
	Absolute value 2 in the room	168	R	Value (g/kg)
	Room sensor 2 - alarm	169	R	0- OK / 1- Error
	Room sensor 3	170	R	Value (%)
	Absolute value 3 in the room	171	R	Value (g/kg)
	Room sensor 3 - alarm	172	R	0- OK / 1- Error
	Room sensor 4	173	R	Value (%)
	Absolute value 4 in the room	174	R	Value (g/kg)
	Room sensor 4 - alarm	175	R	0- OK / 1- Error
	Inlet	176	R	Value (%)

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	Absolute innlet	177	R	Value (g/kg)
	Innlet - alarm	178	R	0- OK / 1- Error
	Behind recuperator on supply air	179	R	Value (%)
	Absolute behind recuperator on supply air	180	R	Value (g/kg)
	Behind recuperator on supply air - alarm	181	R	0- OK / 1- Error
	Behind the recuperator on the exhaust air	182	R	Value (%)
	Absolute behind the recuperator on the exhaust air	183	R	Value (g/kg)
	Behind the recuperator on the exhaust air - alarm	184	R	0- OK / 1- Error
Dampers	Supply air damper (SUP) - position	188	R	Value (%)
	Supply air damper (SUP) - position signal	189	R	Value (%)
	Supply air damper (SUP) - alarm signal	190	R	0- OK / 1- Error
	Supply air damper (SUP) - alarm	191	R	0- OK / 1- Error
	Extract air damper (ETA) - position	192	R	Value (%)
	Extract air damper (ETA) - position signal	193	R	Value (%)
	Extract air damper (ETA) - alarm signal	194	R	0- OK / 1- Error
	Extract air damper (ETA) - alarm	195	R	0- OK / 1- Error
	Pool flap - position	196	R	Value (%)
	Pool flap - position signal	197	R	Value (%)
	Pool flap - alarm signal	198	R	0- OK / 1- Error
	Pool flap - alarm	199	R	0- OK / 1- Error
	Required minimum amount of fresh air in Comfort mode	200	R/W	Value (%)
	Required minimum amount of fresh air in Reduced mode	201	R/W	Value (%)
	Outside air damper (ODA) - position	202	R	Value (%)
	Outdoor air damper (ODA) - position signal	203	R	Hodnota (%)
	Outdoor air damper (ODA) - alarm signal	204	R	0- OK / 1- Error
	Outdoor air damper (ODA) - alarm	205	R	0- OK / 1- Error
	Mixing damper - position	206	R	Value (%)
	Mixing damper - position signal	27	R	Value (%)
	Mixing damper - alarm signal	208	R	0- OK / 1- Error
	Mixing damper - alarm	209	R	0- OK / 1- Error
	Exhaust air damper (EHA) - position	210	R	Hodnota (%)
	Exhaust air damper (EHA) - position signal	211	R	Hodnota (%)
	Exhaust air damper (EHA) - alarm signal	212	R	0- OK / 1- Error
	Exhaust air damper (EHA) - alarm	213	R	0- OK / 1- Error
	State	214	R	0- Off 1- Mode 2- Humidity 3- AirQuality 4- FrostMin 5- waterMin 6- Error
	Selection of sensor for regulation of fresh air volume based	215	R/W	0- Outdoor 1- Preheat 2- BeforeRecup 3- Supply 4- Room 5- AfterRecup

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	Setting fixed amount of fresh air for Comfort mode in winter	216	R/W	Value (%)
	Setting fixed amount of fresh air for Reduced mode in winter	217	R/W	Value (%)
	Setting fixed amount of fresh air for Comfort mode in summer	218	R/W	Value (%)
	Setting fixed amount of fresh air for Reduced mode in summer	219	R/W	Value (%)
	Temperature limit for 100% fresh air flow rate when control based on the selected temperature in the heating mode	220	R/W	Value (°C)
	Temperature limit for 0% fresh air flow rate when control based on the selected temperature in the heating mode	221	R/W	Value (°C)
	Temperature limit for 100% fresh air flow rate when control based on the selected temperature in the cooling mode	222	R/W	Value (°C)
	Temperature limit for 0% fresh air flow rate when control based on the selected temperature in the cooling mode	223	R/W	Value (°C)
	Choice of fresh air flow control in Comfort mode	224	R/W	0- Fixed 1- Linearly 2- POL (room unit) 3- Setpoint1 4- Setpoint2
	Choice of fresh air flow control in Reduced mode	225	R/W	0- Fixed 1- Linearly 2- POL (room unit) 3- Setpoint1 4- Setpoint2
Water heater 1	Operation pump	231	R	0- Off / 1- On
	Heating water temperature low - alarm	232	R	0- OK / 1- Error
	Valve opening	233	R	0-100%
	Heat exchanger frost protection - alarm	234	R	0- OK / 1- Error
	Low supply air temperature - alarm	235	R	0- OK / 1- Error
	State	236	R	0- Off 2- Heat 3- Humidity 4- LowTempOutdoor 5- LowTempSupply 6- LowTempWater 8- Preheating 10- TempWtrBad 11- FrostThermostat 12- Error
	Summer operation	239	R/W	0- Block 1- Allow
	Thermal protection pump - alarm	237	R	0- OK / 1- Error
	Pump operating hours	238	R	Value

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
Water heater 2	Operation pump	428	R	0- Off / 1- On
	Heating water temperature low - alarm	429	R	0- OK / 1- Error
	Valve opening	430	R	0-100%
	Heat exchanger frost protection - alarm	431	R	0- OK / 1- Error
	Low supply air temperature - alarm	432	R	0- OK / 1- Error
	State	433	R	Same as water heater 1
	Summer operation	434	R/W	0- Block 1- Enable
	Thermal protection pump - alarm	435	R	0- OK / 1- Error
	Pump operating hours	436	R	Value
Water cooler 1	Operation pump	242	R	0- Off / 1- On
	Valve opening	243	R	0-100%
	State	244	R	0- Off 1- Cool 3- Deumid 9- NoCool 12- Error
	Thermal protection pump - alarm	245	R	0- OK / 1- Error
	Pump operating hours	246	R	Value
Water cooler 2	Operation pump	135	R	0- Off / 1- On
	Valve opening	136		0-100%
	State	137		Same as water cooler 1
	Thermal protection pump - alarm	138	R	0- OK / 1- Error
	Pump operating hours	139	R	Value
Recuperation	State	251	R	0- Off 1- Cool 2- Heat 3- Deumid 8- Preheat 9- NoCool 10- NoHeat 11- Frost 12- Error
	Power	252	R	0-100%
	Operation	253	R	0- Off / 1- On
	Operating hours	254	R	Value
	Enabling operation in ventilation mode	255	R/W	0- No 1- Cool 2- Heat 3- Always
	Frost protection exchanger - alarm	256	R	0- OK / 1- Error
	Frost protection pressure sensor	257	R	Value (Pa)
	Frost protection pressure sensor - alarm	258	R	0- OK / 1- Error
	Setting limit pressure for frost protection	259	R/W	Value (Pa)
	State - feedback - alarm	260	R	0- OK / 1- Error
	Glycol pressure	261	R	0- OK / 1- Low
	Number of starts of make-up pump	262	R	Value
	Setting the minimum glycol pressure	263	R/W	Value (Pa)

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	Glycol pressure sensor	264	R	Value (Pa)
	Glycol pressure sensor - alarm	265	R	0- OK / 1- Error
	Bypass damper - position signal	266	R	Value (%)
	Bypass damper - alarm signal	267	R	0- OK / 1- Error
	Bypass damper - alarm	268	R	0- OK / 1- Error
	Ventilate with heat recovery	269	R/W	0- No 1- Cool 2- Heat 3- Always
Condensing unit 1	State	271	R	0- Off 1- Cool 2- Heat 3- Humidity 4- LowTempOutdoor 9- NoCool 10- NoHeat 11- Frost 12- Error
	Power	272	R	0-100%
	Operation	273	R	0- Off / 1- On
	Operating hours	274	R	Value
	State - feedback - alarm	275	R	0- OK / 1- Error
	Number of defrosts	276	R	Value
	Number of starts	277	R	Value
Condensing unit 2	State	279	R	Same as condensing unit 1
	Power	280	R	0-100%
	Operation	281	R	0- Off / 1- On
	Operating hours	282	R	Value
	State - feedback - alarm	283	R	0- OK / 1- Error
	Number of defrosts	284	R	Value
	Number of starts	285	R	Value
Condensing unit 3	State	287	R	Same as condensing unit 1
	Power	288	R	0-100%
	Operation	289	R	0- Off / 1- On
	Operating hours	290	R	Value
	State - feedback - alarm	291	R	0- OK / 1- Error
	Number of defrosts	292	R	Value
	Number of starts	293	R	Value
Condensing unit 4	State	295	R	Same as condensing unit 1
	Power	296	R	0-100%
	Operation	297	R	0- Off / 1- On
	Operating hours	298	R	Value
	State - feedback - alarm	299	R	0- OK / 1- Error
	Number of defrosts	300	R	Value

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	Number of starts	301	R	Value
Condensing unit 5	State	302	R	Same as condensing unit 1
	Power	303	R	0-100%
	Operation	304	R	0- Off / 1- On
	Operating hours	305	R	Value
	State - feedback - alarm	306	R	0- OK / 1- Error
	Number of defrosts	307	R	Value
	Number of starts	308	R	Value
Condensing unit 6	State	309	R	Same as condensing unit 1
	Power	310	R	0-100%
	Operation	311	R	0- Off / 1- On
	Operating hours	312	R	Value
	State - feedback - alarm	313	R	0- OK / 1- Error
	Number of defrosts	314	R	Value
	Number of starts	315	R	Value
Condensing units	Maximum power	319	R/W	0-100%
	Minimum outdoor temperature blocking cooling	320	R/W	Value (°C)
	Block cooling in winter or heating in summer	321	R/W	0- No / 1- Yes
	Minimum outdoor temperature blocking heating	322	R/W	Value (°C)
	Defrost all units - alarm	323	R	0- OK / 1- Error
Electrical heater 1	Operation	331	R	0- Off / 1- On
	Power	332	R	0-100%
	Maximum power	333	R/W	0-100%
	State	334	R	0- Off 2- Heat 5- HighTempSupply 12- Error
	Summer operation	335	R/W	0- Block 1- Allow
	Operating hours	336	R	Value
	State - feedback - alarm	337	R	0- OK / 1- Error
Electrical heater 2	Operation	338	R	0- Off / 1- On
	Power	339	R	0-100%
	Maximum power	340	R/W	0-100%
	State	341	R	Same as electrical heater 1
	Summer operation	342	R/W	0- Block 1- Allow
	Operating hours	343	R	Value
	State - feedback - alarm	344	R	0- OK / 1- Error
Gas heater 1	Burner - state	350	R	0- Off 2- Heat 5- HighTempSupply 7- HighTempFlue

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
				10- NoHeat 12- Error
	Burner - operation	351	R	0- Off / 1- On
	Burner - power	352	R	0-100%
	Burner - maximum power	353	R/W	0-100%
	Summer operation	354	R/W	0- Block 1- Allow
	Burner - feadback - alarm	355	R	0- OK / 1- Error
	Burner - error	356	R	0- OK / 1- Error
	Maximum safe flue gas temperature - alarm	357	R	0- OK / 1- Error
	Burner - operating hours	358	R	Value
	Burner - number of turn-on's	359	R	Value
	Exchanger damper - position	360	R	0-100%
	Exchanger damper - position signal	361	R	Value (%)
	Exchanger damper - alarm signal	362	R	0- OK / 1- Error
	Exchanger damper - alarm	363	R	0- OK / 1- Error
	Exchanger convector- operation	364	R	0- Off / 1- On
	Exchanger convector - number of starts	365	R	Value
Gas heater 2	Burner - state	440	R	0- Off 2- Heat 5- HighTempSupply 7- HighTempFlue 10- NoHeat 12- Error
	Burner - operation	441	R	0- Off / 1- On
	Burner - power	442	R	0-100%
	Burner - maximum power	443	R/W	0-100%
	Summer operation	444	R/W	0- Block 1- Allow
	Burner - feadback - alarm	445	R	0- OK / 1- Error
	Burner - error	446	R	0- OK / 1- Error
	Maximum safe flue gas temperature - alarm	447	R	0- OK / 1- Error
	Burner - operating hours	448	R	Value
	Burner - number of turn-on's	449	R	Value
	Exchanger damper - position	450	R	0-100%
	Exchanger damper - position signal	451	R	Value (%)
	Exchanger damper - alarm signal	452	R	0- OK / 1- Error
	Exchanger damper - alarm	453	R	0- OK / 1- Error
	Exchanger convector- operation	454	R	0- Off / 1- On
	Exchanger convector - number of starts	455	R	Value
Supply fan	State	381	R	0- Off 1- Tempering 2- Reduced 3- Comfort 4- 3xSpeed 5- RoomUnit 6- TempSupply 7- MixDamper

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
				8- BadAQ 9- Press 10- Ventilation 12- Start 13- Release 14- Error
	Primary fan operation	382	R	0- Off / 1- On
	Backup fan operation	380	R	0- Off / 1- On
	Speed	383	R	0-100%
	Required speed for Reduced mode in summer or medium speed in 3xSpeed	384	R/W	0-100%
	Required speed for Reduced mode in winter	400	R/W	0-100%
	Required speed for Comfort mode in summer or maximum speed in 3xSpeed	385	R/W	0-100%
	Required speed for Comfort mode in winter	420	R/W	0-100%
	Operating hours	386	R	Value
	Number of starts	387	R	Value
	State - feedback - alarm	388	R	0- OK / 1- Error
	Press sensor	389	R	Value (Pa)
	Flow sensor	390	R	Value (Pa)
	Flow	391	R	Value (m3/h)
	Press sensor - alarm	392	R	0- OK / 1- Error
	Flow sensor - alarm	393	R	0- OK / 1- Error
	Service switch - alarm	394	R	0- OK / 1- Error
	Air flow contact - alarm	104	R	0- OK / 1- Error
	Required minimum speed in 3xSpeed	395	R/W	0-100%
	Required pressure for Reduced mode	396	R/W	Value (Pa)
	Required pressure for Comfort mode	397	R/W	Value (Pa)
	Required flow rate for Reduced mode	398	R/W	Value (m3/h)
	Required flow rate for Comfort mode	399	R/W	Value (m3/h)
Extract fan	State	401	R	Same as supply fan
	Operation	402	R	0- Off / 1- On
	Speed	403	R	0-100%
	Required speed for Reduced mode in summer or medium speed in 3xSpeed	404	R/W	0-100%
	Required speed for Reduced mode in winter	421	R/W	0-100%
	Required speed for Comfort mode in summer or maximum speed in 3xSpeed	405	R/W	0-100%
	Required speed for Comfort mode in winter	422	R/W	0-100%
	Operating hours	406	R	Value
	Number of starts	407	R	Value
	State - feedback - alarm	408	R	0- OK / 1- Error
	Press sensor	409	R	Value (Pa)
	Flow sensor	410	R	Value (Pa)
	Flow	411	R	Value (m3/h)
	Press sensor - alarm	412	R	0- OK / 1- Error
	Flow sensor - alarm	413	R	0- OK / 1- Error
	Service switch - alarm	414	R	0- OK / 1- Error

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	Air flow contact - alarm	105	R	0- OK / 1- Error
	Required minimum speed in 3xSpeed	415	R/W	0-100%
	Required pressure for Reduced mode	416	R/W	Value (Pa)
	Required pressure for Comfort mode	417	R/W	Value (Pa)
	Required flow rate for Reduced mode	418	R/W	Value (m3/h)
	Required flow rate for Comfort mode	419	R/W	Value (m3/h)
Fans	Starting speed	423	R	0- 100%
Fans - temperature compensation	Compensation source	369	R/W	0- No 1- Temperature 2- Selection 3- Both
	Compensation validity	370	R/W	0- Mode 1- Start 2- Always
	Control temperature	371	R/W	0- Supply 1- Exhaust
	Offset of compensation temperature to desired supply temperature for switching on compensation	372	R/W	Value * 10 (°C)
	Offset of compensation temperature to desired supply temperature for switching off compensation	373	R/W	Value * 10 (°C)
	Compensation switch-off delay	374	R/W	Value (min)
	Speed level from operating to switch off compensation	375	R/W	0-100%
	Source Selection - compensation in case of cooling failure	376	R/W	0- No / 1- Yes
	Source Selection - compensation in case of heating failure	377	R/W	0- No / 1- Yes
	Source Selection - fan selection for defrost compensation	378	R/W	0- No 1- Supply 2- Exhaust 3- Both
	Speed compensation - alarm	379	R	0- OK / 1- Error
Fans - mixing compensation	Fan selection	226	R/W	0- No 1- Supply 2- Drain 3- Both
	Compensation validity	227	R/W	0- Mode 1- Start 2- Always
Fire	State	510	R	0- OK 1- Fire 2- Smoke 3- Fire&Smoke
	Fire - alarm	511	R	0- OK / 1- Fire
	Smoke detector 1 - alarm	512	R	0- OK / 1- Smoke
	Smoke detector 2 - alarm	513	R	0- OK / 1- Smoke
Fire dampers	Fire damper 1 - state	514	R	0- Null 1- Mezipoloha 2- Close 3- Open 4- Error

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
				5- Error
	Fire damper 2 - state	515	R	Same as fire damper 1
	Fire damper 3 - state	516	R	
	Fire damper 4 - state	517	R	
	Fire damper 5 - state	518	R	
	Fire damper 6 - state	519	R	
	Fire damper 7 - state	520	R	
	Fire damper 8 - state	521	R	
	Fire damper 9 - state	523	R	
	Fire damper 10 - state	524	R	
	Fire damper 11 - state	525	R	
	Fire damper 12 - state	526	R	Same as fire damper 1
	Fire damper 13 - state	527	R	
	Fire damper 14 - state	528	R	
	Fire damper 15 - state	529	R	
	Fire damper 16 - state	530	R	
	Fire damper 17 - state	502	R	
	Fire damper 18 - state	503	R	
	Fire damper 19 - state	504	R	
	Fire damper 20 - state	505	R	
	Fire damper 21 - state	506	R	
	Fire damper 22 - state	507	R	
	Fire damper 23 - state	508	R	
	Fire damper 24 - state	509	R	
	Global - alarm	522	R	0- OK / 1- Error
Heat pump	Circuit 1 - state	531	R	0- Off 1- Cool 2- Heat 9- NoCool 10- NoHeat 11- Frost 12- Error
	Circuit 1 - power	532	R	0-100%
	Circuit 1 - operation	533	R	0- Off / 1- On
	Circuit 1 - operating hours	534	R	Value
	Circuit 1 - feadback - alarm	535	R	0- OK / 1- Error
	Circuit 1 - number of starts	536	R	Value
	Circuit 1 - compressor - alarm	537	R	0- OK / 1- Error
	Circuit 1 - frequency inverter - alarm	538	R	0- OK / 1- Error
	Circuit 1 - high press - alarm	539	R	0- OK / 1- Error
	Circuit 1 - low press - alarm	540	R	0- OK / 1- Error
	Circuit 1 - start power	541	R/W	0-100%
	Circuit 1 - compressor temperature sensor	577	R	Value * 10 (°C)
	Circuit 1 - compressor temperature sensor - alarm	578	R	0- OK / 1- Error
	Circuit 2 - state	542	R	Same as circuit 1
	Circuit 2 - power	543	R	0-100%
	Circuit 2 - operation	544	R	0- Off / 1- On
	Circuit 2 - operating hours	545	R	Value

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	Circuit 2 - feedback - alarm	546	R	0- OK / 1- Error
	Circuit 2 - number of starts	547	R	Value
	Circuit 2 - compressor - alarm	548	R	0- OK / 1- Error
	Circuit 2 - frequency inverter - alarm	549	R	0- OK / 1- Error
	Circuit 2 - high press - alarm	550	R	0- OK / 1- Error
	Circuit 2 - low press - alarm	551	R	0- OK / 1- Error
	Circuit 2 - start power	552	R/W	0-100%
	Circuit 2- compressor temperature sensor	579	R	Value * 10 (°C)
	Circuit 2 - compressor temperature sensor - alarm	580	R	0- OK / 1- Error
	Circuit 3 - state	581	R	Same as circuit 1
	Circuit 3 - power	582	R	0-100%
	Circuit 3 - operation	583	R	0- Off / 1- On
	Circuit 3 - operating hours	584	R	Value
	Circuit 3 - feedback - alarm	585	R	0- OK / 1- Error
	Circuit 3 - number of starts	586	R	Value
	Circuit 3 - compressor - alarm	587	R	0- OK / 1- Error
	Circuit 3 - frequency inverter - alarm	588	R	0- OK / 1- Error
	Circuit 3 - high press - alarm	589	R	0- OK / 1- Error
	Circuit 3 - low press - alarm	590	R	0- OK / 1- Error
	Circuit 3 - start power	591	R/W	0-100%
	Circuit 3- compressor temperature sensor	592	R	Value * 10 (°C)
	Circuit 3 - compressor temperature sensor - alarm	593	R	0- OK / 1- Error
	Frost protection - alarm	553	R	0- OK / 1- Error
	Frost protection pressure sensor	554	R	Value (Pa)
	Frost protection pressure sensor - alarm	555	R	0- OK / 1- Error
	Setting limit pressure for frost protection	556	R/W	Value (Pa)
	Maximum power	557	R/W	0-100%
	Start delay	558	R/W	Value (s)
	Shutdown delay	559	R/W	Value (s)
	Power compensation	560	R/W	0- Off / 1- On
	Power compensation - min speed fans	561	R/W	0-100%
	Power compensation - max speed fans	562	R/W	0-100%
	Condensation pressure sensor	563	R	Value (Pa)
	Condensation pressure sensor - alarm	564	R	0- OK / 1- Error
	Condensation temperature sensor	565	R	Value * 10 (°C)
	Condensation temperature sensor - alarm	566	R	0- OK / 1- Error
	Temperature sensor 1	567	R	Value * 10 (°C)
	Temperature sensor 1 - alarm	568	R	0- OK / 1- Error
	Temperature sensor 2	569	R	Value * 10 (°C)
	Temperature sensor 2 - alarm	570	R	0- OK / 1- Error
	Temperature sensor 3	571	R	Value * 10 (°C)
	Temperature sensor 3 - alarm	572	R	0- OK / 1- Error
	Temperature sensor 4	573	R	Value * 10 (°C)
	Temperature sensor 4 - alarm	574	R	0- OK / 1- Error
	Temperature sensor 5	575	R	Value * 10 (°C)
	Temperature sensor 5 - alarm	576	R	0- OK / 1- Error
Humidifier	State	601	R	0- Off 3- Dehumid

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
				12- Error
	Opearion	602	R	0- Off / 1- On
	Power	603	R	0-100%
	Start power	604	R/W	0-100%
	Shutdown delay	605	R/W	Value (s)
	Operating hours	606	R	Value
	Number of starts	607	R	Value
	State - feeedback - alarm	608	R	0- OK / 1- Error
Boiler	State	611	R	0- Off / 1- On
	Selection of conditions for switching on the boiler after switching on water heating	612	R/W	0- No 1- Winter 2- Always
	Choice of switching on the boiler from low heating water	613	R/W	0- No / 1- Yes
	Selection of conditions for switching on the boiler from low outdoor temperature	614	R/W	0- No 1- Winter 2- Heat 3- Always
	Low outdoor temperature limit for switching on the boiler	615	R/W	Value * 10 (°C)
	Selection of conditions for switching on the boiler when the difference between the outdoor temperature and the required temperature is exceeded	616	R/W	0- No 1- Winter 2- Heat 3- Always
	The difference between the outdoor temperature and the	617	R/W	Value * 10 (°C)
	Selection of conditions for switching on the boiler from the power of the condensing unit	618	R/W	0- No 1- Winter 2- Always
	The required capacity of the condensing unit to switch on the	619	R/W	0-100%
	Selection of conditions for switching on the fans since the boiler was switched on	620	R/W	0- No 1- Winter 2- Always
	Switching on of fans after switching on of boiler	621	R/W	Value (min)
	Delay of switching on the boiler	622	R/W	Value (min)
2nd circuit - required temperatures	In current mode	460	R/W	Value * 10 (°C)
	For Comfort mode in summer	461	R/W	Value * 10 (°C)
	For Comfort mode in winter	462	R/W	Value * 10 (°C)
	For Setback mode in summer	463	R/W	Value * 10 (°C)
	For Setback mode in winter	464	R/W	Value * 10 (°C)
	For Space Frost Protection mode	465	R/W	Value * 10 (°C)
	Summer compensation	466	R/W	Value * 10 (°C)
Přímé řízení	Desired temperature	470	R/W	Value * 10 (°C), 120°C - blocks direct control
	Desired temperature 2nd circuit	471	R/W	Value * 10 (°C), 120°C - blocks direct control
	Supply fan speed	472	R/W	Value (%), 120% - blocks direct control
	Extract fan speed	473	R/W	Value (%), 120% - blocks direct control
	Fresh air quantity	474	R/W	Value (%), 120% - blocks

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
				direct control
Internal Modbus	Fan supply - communication - alarm	700	R	0- OK / 1- Error
	Fan supply - speed	701	R/W	0-100%
	Fan supply - input power	702	R	Value (kW)
	Fan supply - current	703	R	Value (A)
	Fan supply - voltage	704	R	Value (V)
	Fan supply - sequential master logic (only FM)	705	R	0- Init 1- Stop 2- Startup 3- Run 4- Shutdown 5- Acknowledge
	Fan supply - status	706	R	Value
	Fan supply - status 2 (only EC motor)	707	R	Value
	Fan extract - communication - alarm	708	R	0- OK / 1- Error
	Fan extract - speed	709	R/W	0-100%
	Fan extract - input power	710	R	Value (kW)
	Fan extract - current	711	R	Value (A)
	Fan extract - voltage	712	R	Value (V)
	Fan extract - sequential master logic (only FM)	713	R	0- Init 1- Stop 2- Startup 3- Run 4- Shutdown 5- Acknowledge
	Fan extract - status	714	R	Value
	Fan extract - status 2 (only EC motor)	715	R	Value
	Heat pump Circuit 1 - suction temperature	716	R	Value * 10 (°C)
	Heat pump Circuit 1 - evaporate temperature	717	R	Value * 10 (°C)
	Heat pump Circuit 1 - evaporate press	718	R	Value (bar)
	Heat pump Circuit 1 - expansion valve open	719	R	0-100%
	Heat pump Circuit 1 - superheat	720	R	Value * 10 (°C)
	Heat pump Circuit 1 - state expansion valve driver	721	R	Value
	Heat pump Circuit 2 - suction temperature	722	R	Value * 10 (°C)
	Heat pump Circuit 2 - evaporate temperature	723	R	Value * 10 (°C)
	Heat pump Circuit 2 - evaporate press	724	R	Value (bar)
	Heat pump Circuit 2 - expansion valve open	725	R	0-100%
	Heat pump Circuit 2 - superheat	726	R	Value * 10 (°C)
	Heat pump Circuit 2 - state expansion valve driver	727	R	Value
	Heat pump EV driver - communication - alarm	728	R	0- OK / 1- Error
	Electricity meter- communication - alarm	729	R	0- OK / 1- Error
	Room unit AMR OP - communication - alarm	730	R	0- OK / 1- Error
Mode scheduler	Monday - time 1	736	R/W	Value
	Monday - mode 1	737	R/W	Value
	Monday - time 2	738	R/W	Value
	Monday - mode 2	739	R/W	Value
	Monday - time 3	740	R/W	Value
	Monday - mode 3	741	R/W	Value
	Monday - time 4	742	R/W	Value

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher

Item	Data point	Registry number	Read/Write	Mapping
	Monday - mode 4	743	R/W	Value
	Monday - time 5	744	R/W	Value
	Monday - mode 5	745	R/W	Value
	Monday - time 6	746	R/W	Value
	Monday - mode 6	747	R/W	Value
	Tuesday	748	R/W	Same as Monday
	Wednesday	760	R/W	Same as Monday
	Thursday	772	R/W	Same as Monday
	Friday	784	R/W	Same as Monday
	Saturday	796	R/W	Same as Monday
	Sunday	808	R/W	Same as Monday
	Exception - time 1	820	R/W	Value
	Exception - mode 1	821	R/W	Value
	Exception - time 2	822	R/W	Value
	Exception - mode 2	823	R/W	Value
	Exception - time 3	824	R/W	Value
	Exception - mode 3	825	R/W	Value
	Exception - time 4	826	R/W	Value
	Exception - mode 4	827	R/W	Value
	Exception - time 5	828	R/W	Value
	Exception - mode 5	829	R/W	Value
	Exception - time 6	830	R/W	Value
	Exception - mode 6	831	R/W	Value
	Default value out of scheduler	832	R/W	Value
Temperature Season	Current season	833	R	0- Summer / 1- Winter
	Temperature	834	R/W	Value * 10 (°C)
	Delay	835	R/W	Value (min)
External switches	Temperature season	840	R/W	0- Summer / 1- Winter
	Enable Cooling/Heating	841	R/W	0- Cool / 1- Heat
	Enable BMS	842	R/W	0- Off / 1- On
	Mode status "Off"	843	R/W	0- Off / 1- Tempering
Service	Regular service alert	851	R	0- No / 1- Yes
	Regular service setting	852	R/W	0- Ne 1-Year 2-Year/2 3-Year/4 4- Month
Date	Year	853	R/W	Value
	Month	854	R/W	Value
	Day	855	R/W	Value
	Hodina	856	R/W	Value
	Minute	857	R/W	Value
	Second	858	R/W	Value
	Všední den	859	R/W	Value
Free cooling	State	896	R	0- Off 1- TOutMin 2- TOutMax

KJM MANDÍK - ModBus table for AHU version software 61.01 and higher


Item	Data point	Registry number	Read/Write	Mapping
				3- TSupMin 4- ErrSensor 5- MinOn 6- NormOn 7- HardOn
	Turned on	897	R	0- Off / 1- On
	Operating hours	898	R	Value
	Number of turn-on's	899	R	Value
	Set room temperature	900	R/W	Value * 10 (°C)
	Outside temperature hysteresis	901	R/W	Value * 10 (°C)
	Minimal outside temperature	902	R/W	Value * 10 (°C)
	Minimal turned-on time	903	R/W	Value (sec)
Free cooling scheduler	Monday - time 1	904	R/W	Value
	Monday - value 1	905	R/W	0- Off / 1- On
	Monday - time 2	906	R/W	Value
	Monday - value 2	907	R/W	0- Off / 1- On
	Monday - time 3	908	R/W	Value
	Monday - value 3	909	R/W	0- Off / 1- On
	Monday - time 4	910	R/W	Value
	Monday - value 4	911	R/W	0- Off / 1- On
	Monday - time 5	912	R/W	Value
	Monday - value 5	913	R/W	0- Off / 1- On
	Monday - time 6	914	R/W	Value
	Monday - value 6	915	R/W	0- Off / 1- On
	Tuesday	748	R/W	Same as Monday
	Wednesday	760	R/W	Same as Monday
	Thursday	772	R/W	Same as Monday
	Friday	784	R/W	Same as Monday
	Saturday	796	R/W	Same as Monday
	Sunday	808	R/W	Same as Monday
	Exception - time 1	988	R/W	Value
	Exception - value 1	989	R/W	0- Off / 1- On
	Exception - time 2	990	R/W	Value
	Exception - value 2	991	R/W	0- Off / 1- On
	Exception - time 3	992	R/W	Value
	Exception - value 3	993	R/W	0- Off / 1- On
	Exception - time 4	994	R/W	Value
	Exception - value 4	995	R/W	0- Off / 1- On
	Exception - time 5	996	R/W	Value
	Exception - value 5	997	R/W	0- Off / 1- On
	Exception - time 6	998	R/W	Value
	Exception - value 6	999	R/W	0- Off / 1- On

Important:


- All registries may not be accessible. The usability of some registers depends on the specific configuration of the Climatix controller.
- The registry address is 1 smaller than its registry number.
- All registers are Holding Integer.

Modbus connection variants

1. Modbus RTU - port RS485

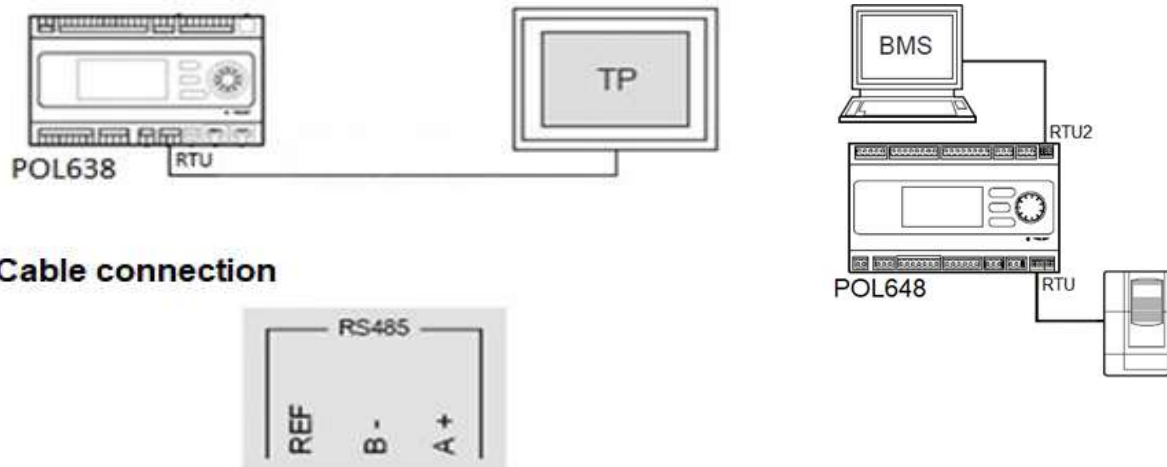


2. Modbus RTU - service port T-HI

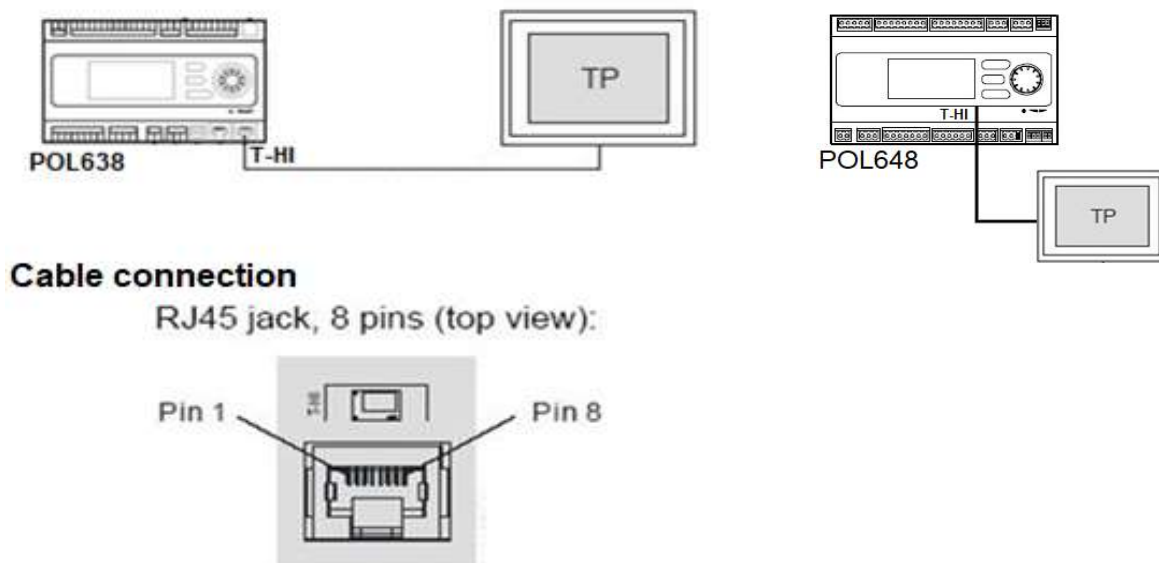

Cable connection

RJ45 jack, 8 pins (top view):

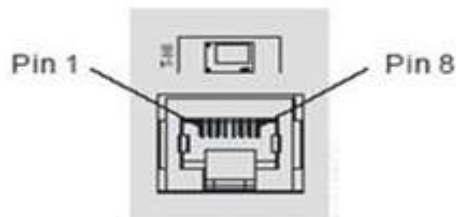


Pin-out for RJ45-
connector

Pin	Signal
1	USB device, D+
2	USB device, D-
3	RS485, A+
4	Ground
5	Select 2
6	RS485, B-
7	Select 1
8	DC 24 V (Output)


Modbus connection variants

3. Modbus TCP/IP - ethernet port

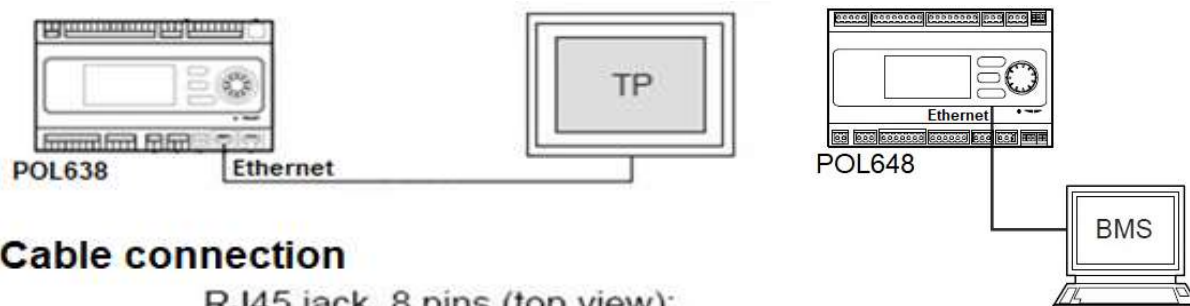


Cable connection

RJ45 jack, 8 pins (top view):

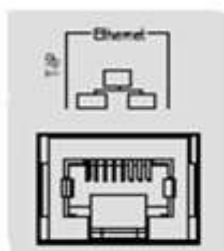

4. Modbus RTU - communication modul POL902

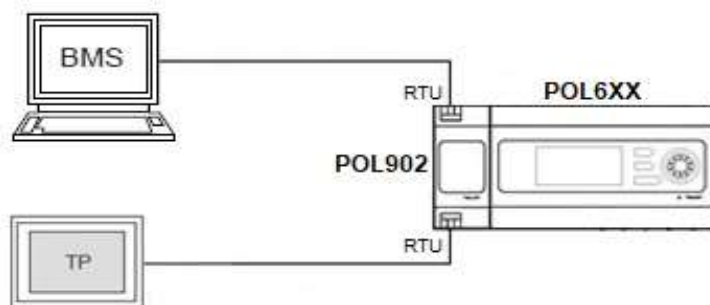

Cable connection

